


Film (VHS, VHS-C, Betamax) to Digital
VIDBOX Video Conversion Suite
VHS Player

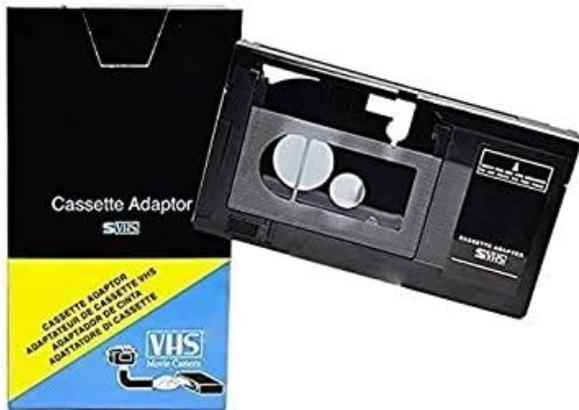 


Disclaimer:


“Patrons are responsible for handling and digitizing their own materials. Russell Library is not responsible for loss or damage to personal property, including digital and or physical property. Reproducing copyrighted materials is a violation of federal copyright law and is not allowed.”

Directions


1. Open the VidBox Application on the desktop by double clicking the icon

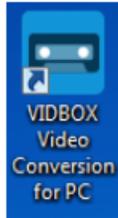


2. Click Video

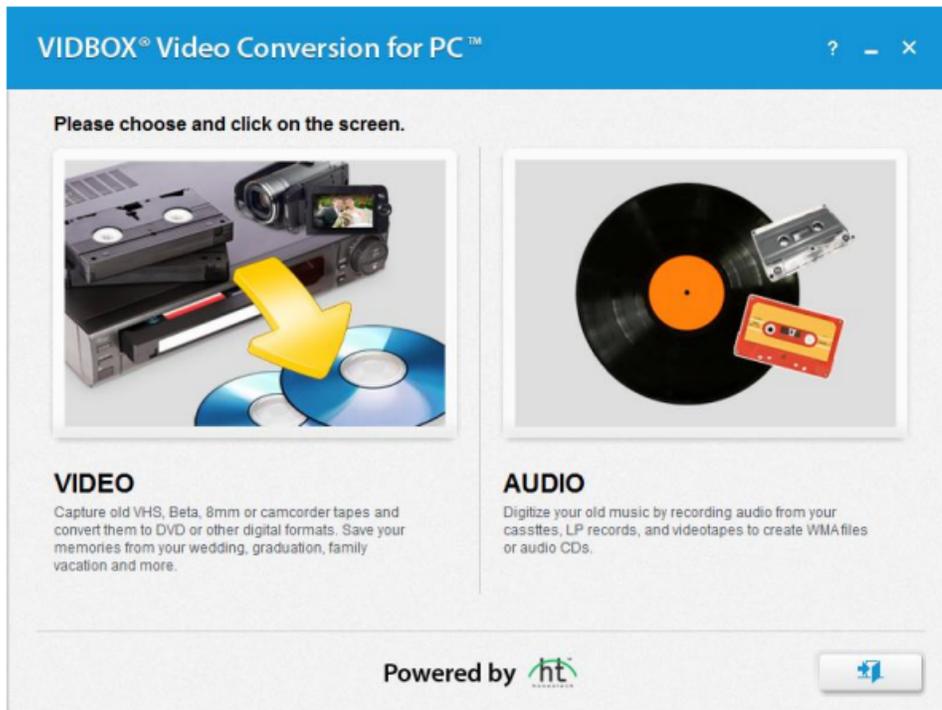

3. Click RCA Composite - one highlighted in the Image - press the arrow button (indicating next)

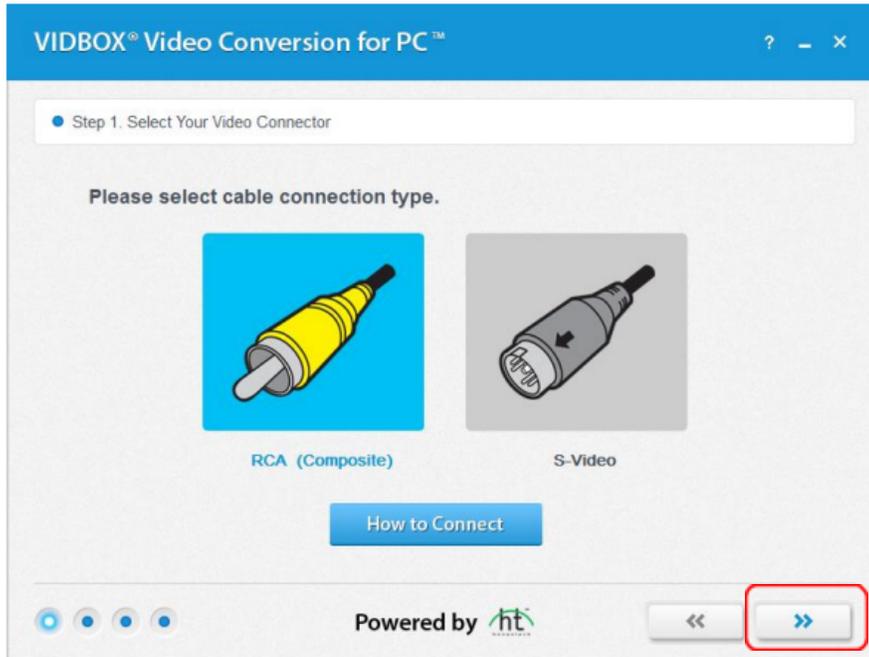


4. Set up your designated recording time - Reminder: it is only a 2.5 hour session and the film is in real time - Click the arrows button (indicating next)

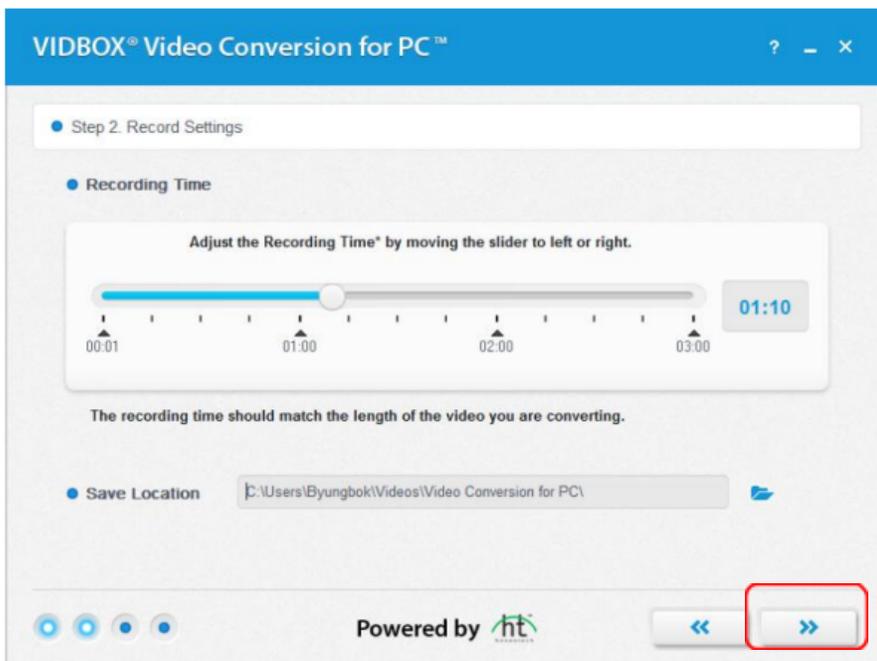


Recording

- Enter the video file name.
- Select the video aspect ratio. a. If you are converting VHS tapes, it should be in 4:3 format. b. Select the Widescreen (16:9) option if your video appears squished or compressed in the Preview Screen. Generally, this will only be necessary for camcorder DV tapes recorded in the 16x9 format.
- Begin playback of your video tape to view it in the Preview Screen.
- Click the [Record] button to start recording. Click the [Stop] button to manually stop the recording any time.
- Once finished, click the arrow pointing to the right to proceed.

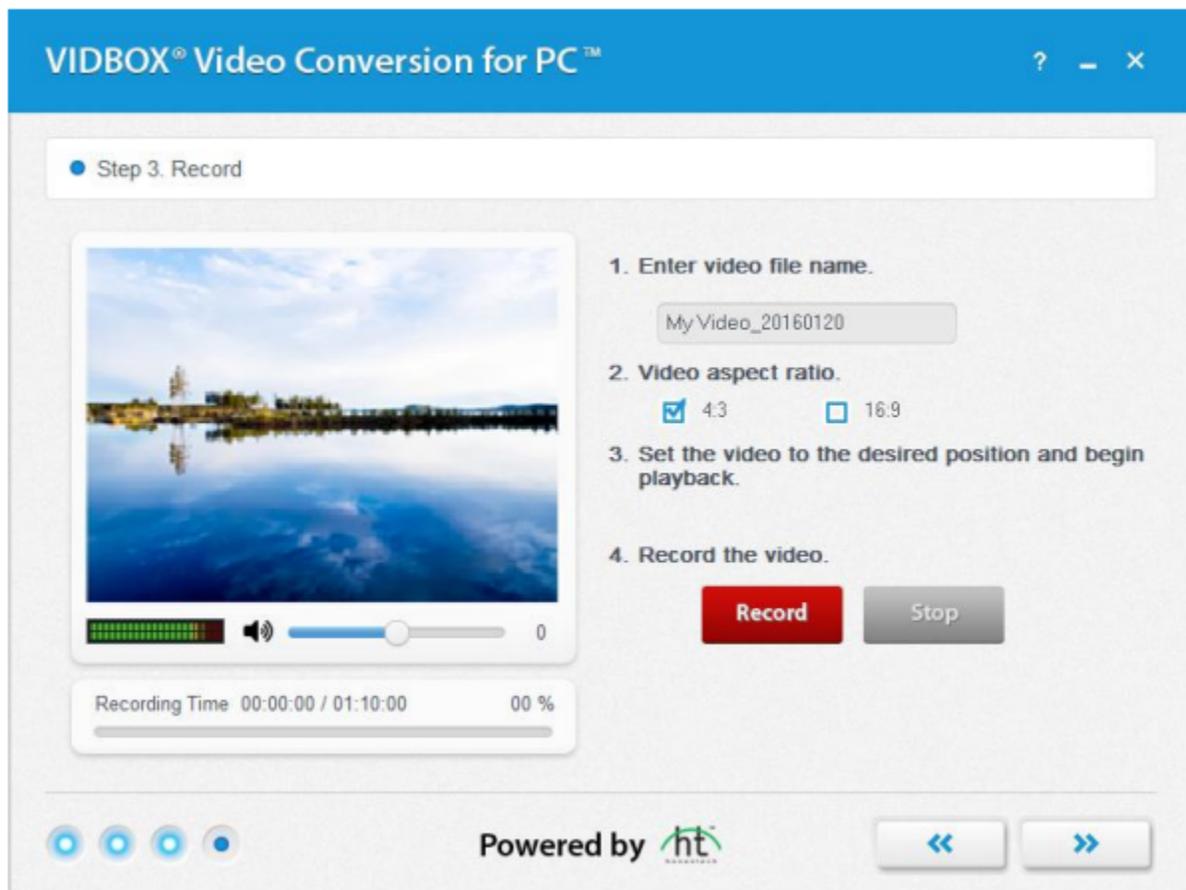

Click “Convert to MP4” to watch on mobile device or computer

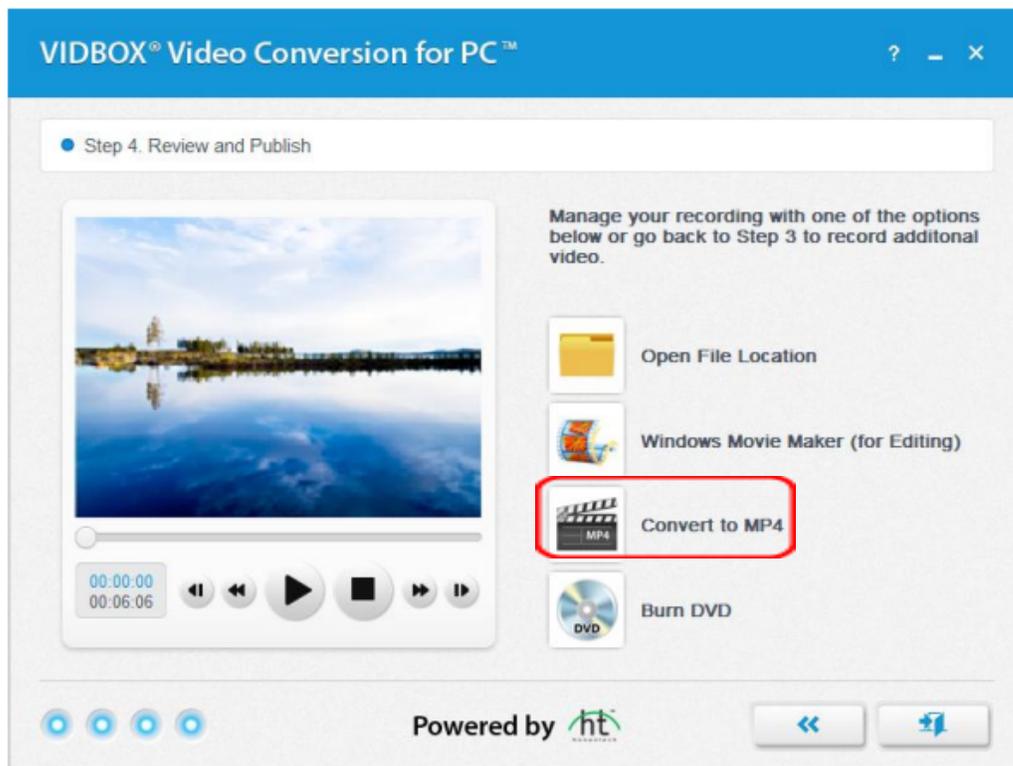

- Choose a resolution setting and video quality setting. Choosing higher resolution and video quality will result in larger file size.
- Click on “Save” the button to begin.

